





— *HOW TO MAKE...A LIBERTY PRINT OVEN MITT!* —

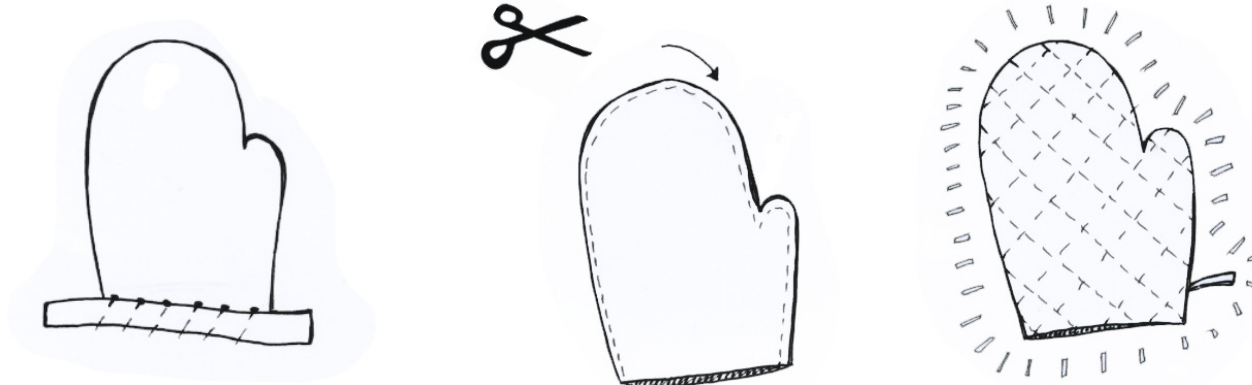


WHAT YOU NEED:

- 60 X 80CM LIBERTY FABRIC (WE HAVE USED CLAIRE-AUDE A)
- 60 X 40CM HEAT RESISTANT WADDING
- 60 X 80CM PLAIN CREAM FABRIC
- 1M OF LIBERTY PRINT BIAS BINDING (WE HAVE USED PEPPER)
- 1 SEWING MACHINE
- ALL THE NORMAL SEWING BITS!


— *STEPS 1-10* —

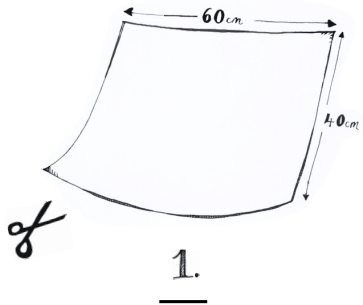


1.
Cut 2x Liberty print
Cut 2x plain fabric
Cut 1x fire resistant wadding

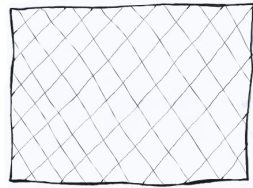


2.
Mark diagonal lines onto the right side on one of Liberty fabric pieces with a water erasable pen.

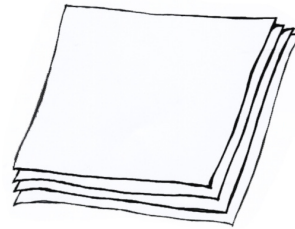


3.
Layer the fabric into a sandwich: Liberty print/plain/wadding/plain/Liberty print. Make sure the right sides are facing out.

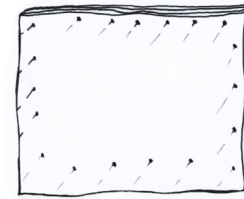


4.
Pin into place.

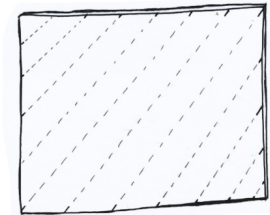


5.
Sew the direction of the lines into places.

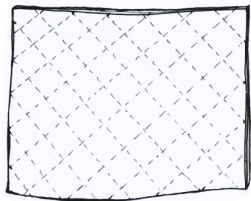


6.
Rotate and sew other lines onto place.

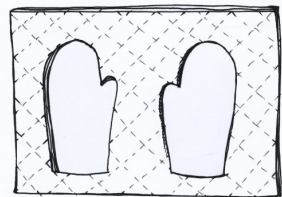


7.
Cut out two pattern pieces. Flip one over and place onto fabric – keeping the arrow in-line with the X's of the stitching.

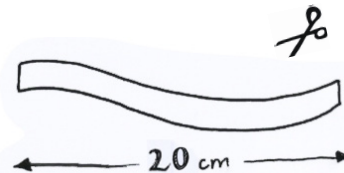

8.
Take the bias binding & cut 20cm strip. Match edges together & press.

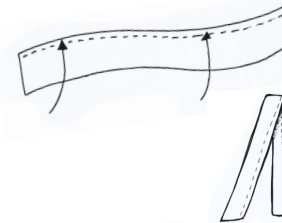


9.
Sew along open edge, then fold in half and press

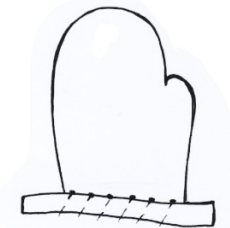


10.
Cut 2x 25cm strips. Fold bias binding along bottom edge of mitt and sew along edge.

—STEPS 11–20—

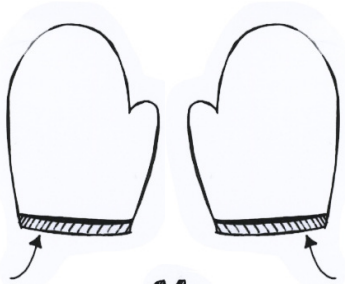

11.

Complete on both mitts.

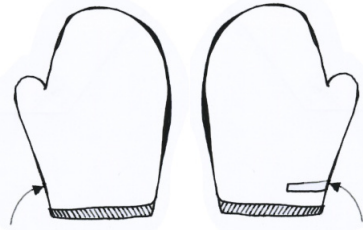


12.

Place onto front side of mitt,
pin into place match right (front) side
together and pin.



13.

Sew along outside of mitt using
1.5 cm seam allowance

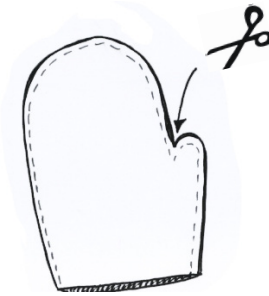


14.

Snip into corner between
the hand and thumb area.
Do not cut into stitch line.




15.

Trim any excess seam allowance from
around the glove

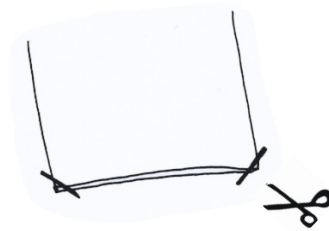


16.

Snip the corners of the bottom
off at an angle

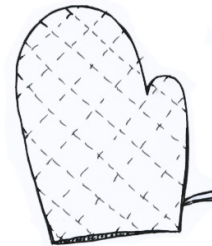

17.

Turn the mitt inside out

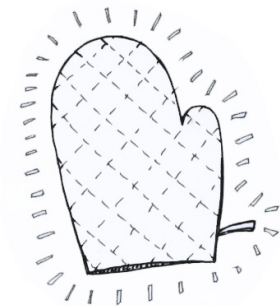

18.

Press all seams, just to neaten up